

Ball valves



ISO 7-1

Model 58103

Mini ball valve female/female BSP - 316 stainless steel

1000 lbs/PN63 - Reduced bore



Specifications

Dimensions: DN8 to DN25 (1/4" to 1")**Connection:** BSP female thread ISO 7-1**Pressure:** PN63 (1000 lbs)**Temperature:** -20°C to +180°C**Material:** 316 or CF8M stainless steel
(for the parts that can come into contact with
the transported fluid)
PTFE + FKM gaskets


Polished body




Béné Inox – 11 chemin de la Pierre Blanche – 69800 SAINT-PRIEST – S.A.S with 240 000 € share capital – SIREN N° 311 810 287
Tel. N°: +33 (0)4 78 90 48 22 – Fax N°: +33 (0)4 78 90 69 59 – www.bene-inox.com – bene@bene-inox.com

Technical information, illustrations and photographs are provided for information only, they are not contractual. Some may vary according to the tolerances accepted in the profession and the applicable standards. All instructions for use, disassembly and maintenance are recommendations only. These could also vary depending on product usage conditions, its installation environment and purchaser requirements – of which the purchaser alone is responsible for their definition.


58103-E V0726

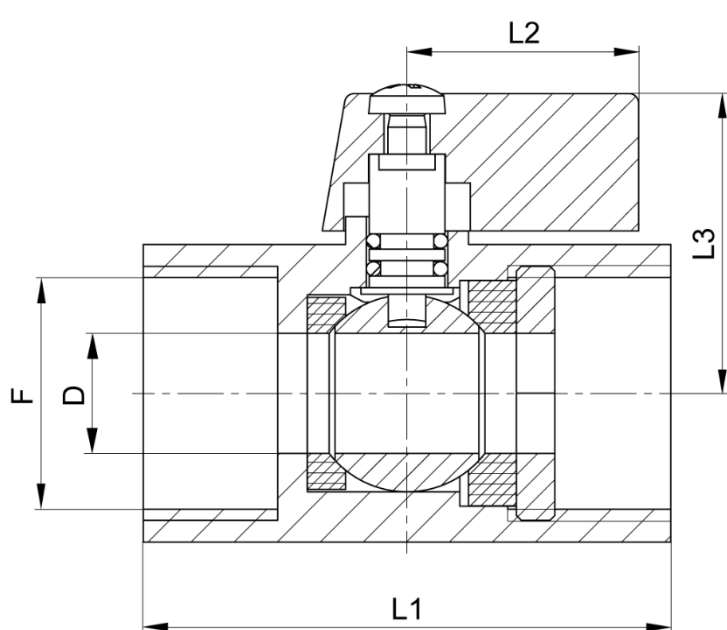

A-A CROSS SECTION

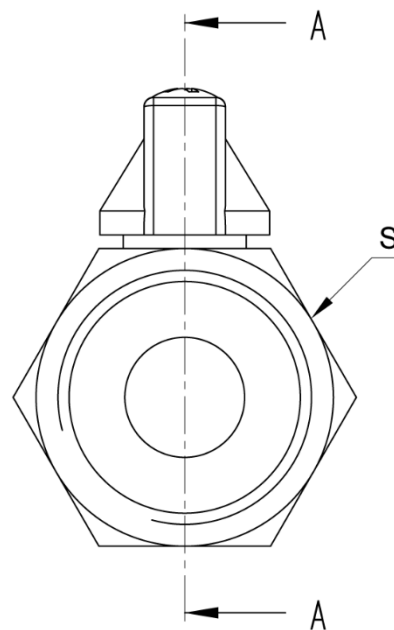

DN (mm)	NB (inches)	D (mm)	F (inches)	L1 (mm)	L2 (mm)	L3 (mm)	S (mm)	Weight (kg)	Part number
6	1/8"	6.5	Rp 1/8"	40	23	25	21	0.10	458103-6
8	1/4"	7	Rp 1/4"	42	23	25	21	0.10	458103-8
10	3/8"	7	Rp 3/8"	42	23	25	21	0.09	458103-10
15	1/2"	9	Rp 1/2"	46	23	27.5	24.5	0.11	458103-15
20	3/4"	12.5	Rp 3/4"	54	23	31	31	0.21	458103-20
25	1"	15	Rp 1"	65	23	34.5	38	0.35	458103-25

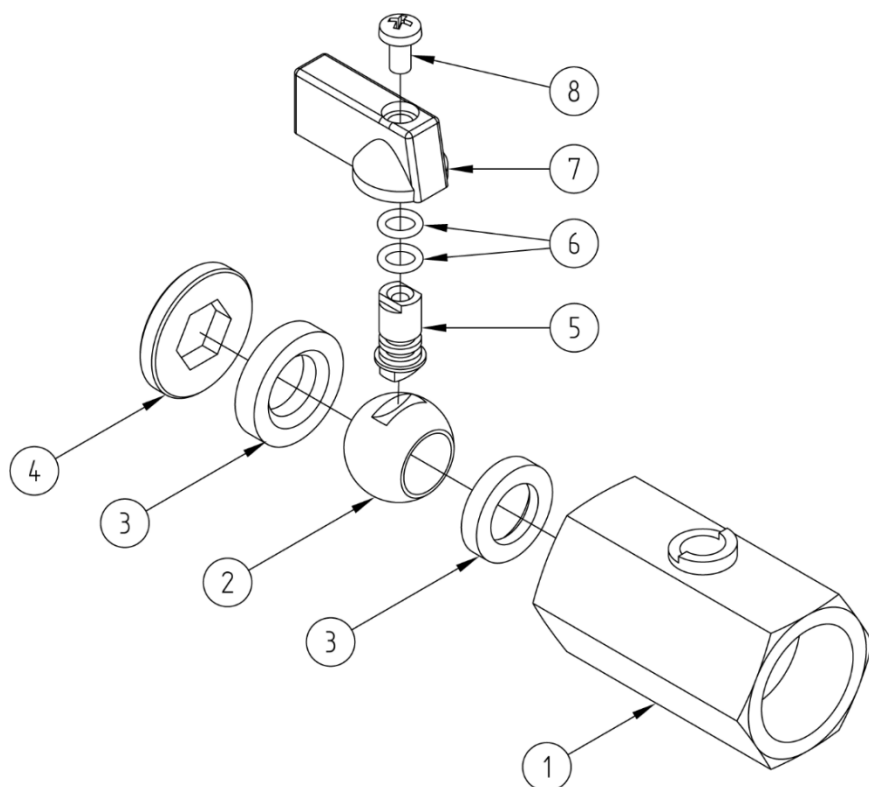

N°	Part Name	Material
1	BODY	ASTM CF8M
2	BALL	AISI 316
3	SEAT RING	PTFE
4	CLAMPING RING	ASTM CF8M
5	SHAFT	AISI 316
6	GASKET	FKM
7	HANDLE	ALUMINIUM
8	BOLT	A2

Use

This valve is suitable for non-abrasive and non-coagulable fluids, as long as the fluids are chemically compatible with the valve parts that they can come into contact with.


This valve is a shut-off valve: it must be either fully open or fully closed.

Do not leave the valve partially open: an opening default, or leaving the ball valve partially open to decrease flow, could lead to cavitation which is likely to damage the valve.

Turn the valve's handle 1/4 turn (90°) clockwise to close the valve or 1/4 turn (90°) anti-clockwise to open it. The valve is open if the handle is in line with the piping.

Pressure and temperature

For pressure/temperature ratings, see the graph below.

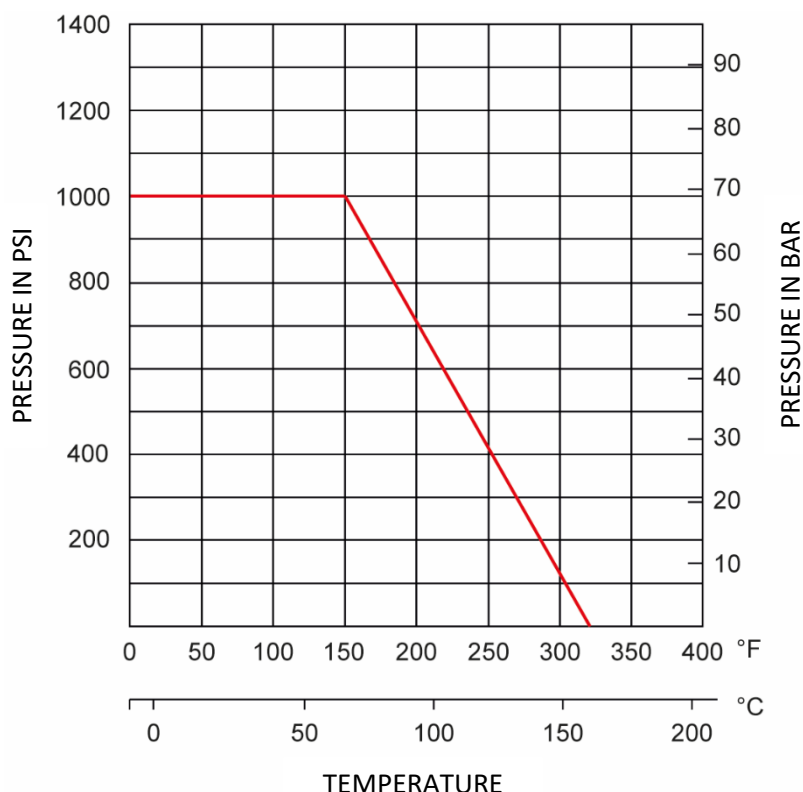

Warning: If the valve is used with fluids that have a temperature above 60°C then people could burn themselves if they touch the valve.

Flow coefficient and pressure loss

Dimensions	DN6	DN8	DN10	DN15	DN20	DN25
	1/8"	1/4"	3/8"	1/2"	3/4"	1"
Kv (m³/h)	5.0	5.0	5.0	11.9	22.9	34.3

The flow coefficient Kv defines water flow rate through a device (e.g. valve, check valve etc.) for a pressure loss (ΔP) of 1 bar. Kv is expressed mathematically as:

$$\Delta P = \frac{Q^2}{K_v^2} \quad \text{so:} \quad K_v = \frac{Q}{\sqrt{\Delta P}}$$

Q in m³/h K_v in m³/h $C_v = 1.16 \times K_v$
 ΔP in bar C_v in GPM (Gallons per minute - US)

Assembly and maintenance instructions

Installation

You can install the valve in any position. However, check that there is enough space to move the valve's handle where you are planning to install the valve.

Check that the installation is clean and free from foreign bodies that could damage the valve.

Check that all piping is perfectly aligned and that the piping support structure is dimensioned so that the valve is not subject to any external stresses. The piping support structure must only support the pipes, not the valve.

How to install a valve with threaded ends:

You must not use the valve's handle when you are tightening the assembly (this could damage the valve). Use a product that is suitable for the working conditions (e.g. PTFE tape) to make sure the valve's threaded connections are sealed correctly, but do not over tighten the connections as this could deform the valve's body.

Clean the installation leaving the valve open so that there are no foreign bodies between the ball and the body. Check the valve is operating correctly.

Pressure test the installation according to the relevant standards (e.g. EN 12266-1), but do not exceed the valve's specifications.

Maintenance

The valve does not require any specific maintenance if it is used in normal operating conditions.

If the valve is never opened or closed during normal operation then you should regularly open and close the valve to check that it is still working correctly.

Standards and compliance

- Connection: BSP female thread in accordance with the standard EN ISO 7-1(Rp).
- Leak testing according to EN 12266-1/API 598.
- This valve complies with European Pressure Equipment Directive (PED) 2014/68/EU (formerly 97/23/EC).