

Ball valves

**Model 58113**

Single piece ball valve female/female BSP 316 stainless steel

800 lbs/PN55 - Reduced bore - Lockable handle



Specifications

Dimensions: DN8 to DN50 (1/4" to 2")

Connection: BSP female thread ISO 7-1

Pressure: PN55 (800 lbs)

Temperature: -20°C to +150°C


Material: 316 or CF8M stainless steel
(for the parts that can come into contact
with the transported fluid)
PTFE gaskets




Béné inox – 11 chemin de la Pierre Blanche – 69800 SAINT-PRIEST – S.A.S with 240 000 € share capital – SIREN N° 311 810 287
Tel. N°: +33 (0)4 78 90 48 22 – Fax N°: +33 (0)4 78 90 69 59 – www.bene-inox.com – bene@bene-inox.com

Technical information, illustrations and photographs are provided for information only, they are not contractual. Some may vary according to the tolerances accepted in the profession and the applicable standards. All instructions for use, disassembly and maintenance are recommendations only. These could also vary depending on product usage conditions, its installation environment and purchaser requirements – of which the purchaser alone is responsible for their definition.

58113-E V0726

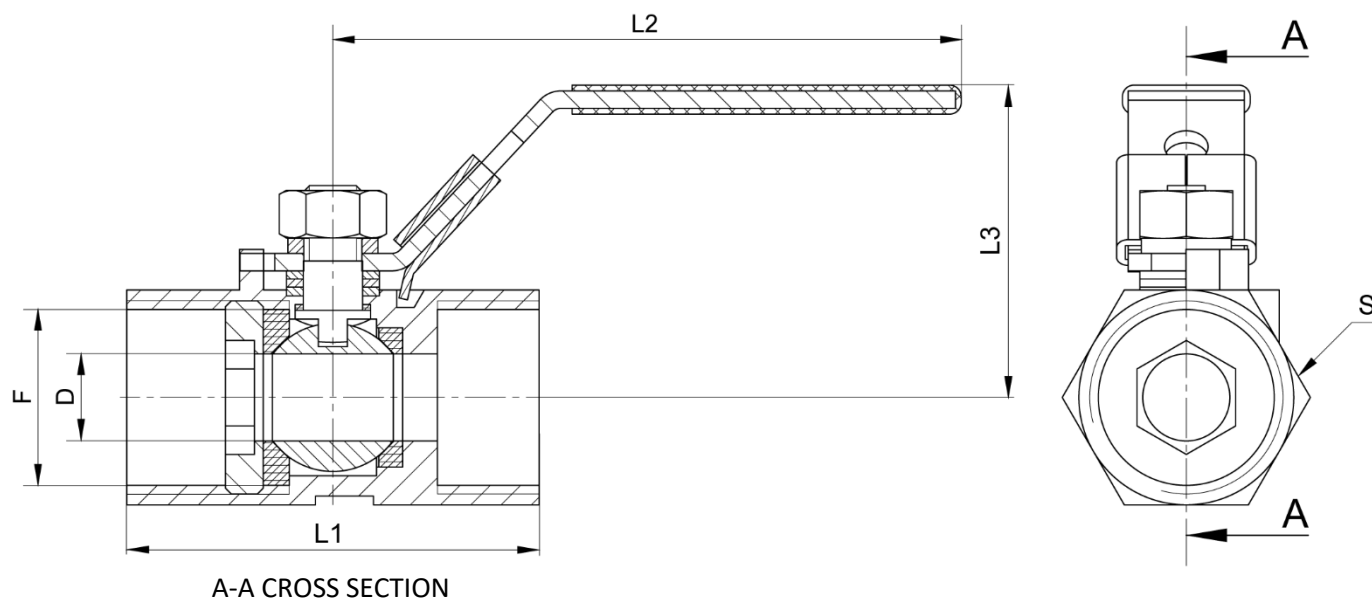

DN (mm)	NB (inches)	D (mm)	F (inches)	L1 (mm)	L2 (mm)	L3 (mm)	S (mm)	Weight (kg)	Part number
8	1/4"	5	Rp 1/4"	39	78	37	18	0.08	458113-8
10	3/8"	7	Rp 3/8"	44	78	37	21	0.11	458113-10
15	1/2"	9	Rp 1/2"	57	88	44	25	0.18	458113-15
20	3/4"	12.5	Rp 3/4"	59	88	48	33	0.26	458113-20
25	1"	15	Rp 1"	71	113	52	37	0.43	458113-25
32	1 1/4"	20	Rp 1 1/4"	77	113	57	47	0.70	458113-32
40	1 1/2"	24.5	Rp 1 1/2"	83	130	66	55	0.88	458113-40
50	2"	32	Rp 2"	100	160	57	65	1.43	458113-50

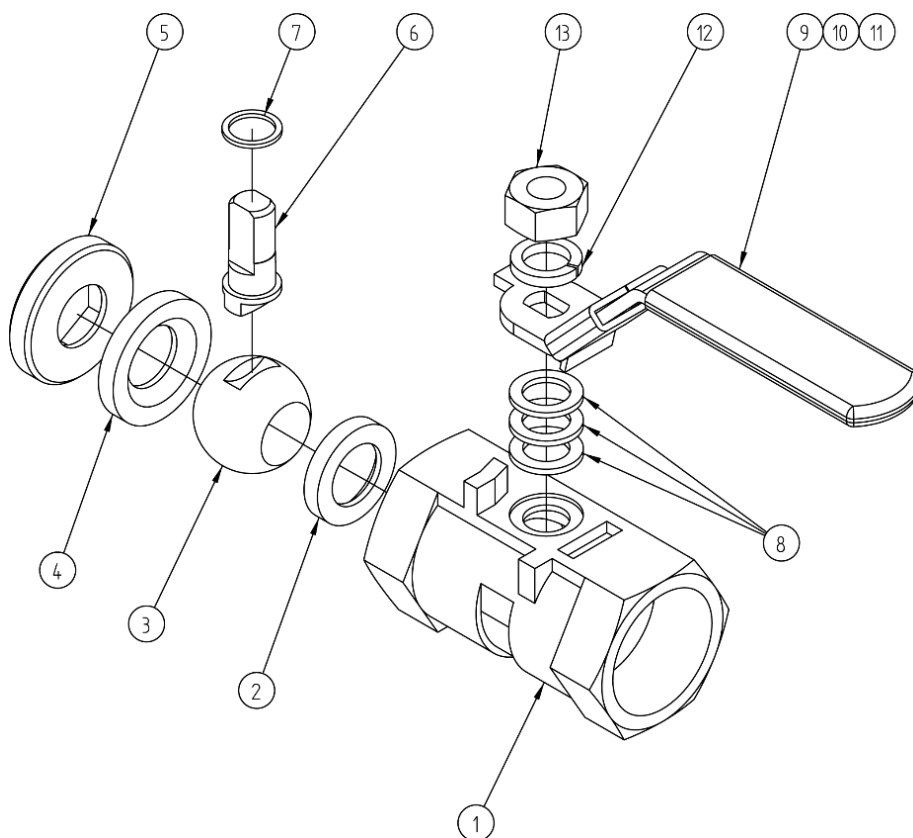

N°	Part Name	Material
1	BODY	CF8M
2	FRONT SEAT RING	PTFE
3	BALL	CF8M
4	BACK SEAT RING	PTFE
5	CLAMPING RING	CF8M
6	SHAFT	AISI 316
7	FLAT SHAFT GASKET	PTFE
8	WASHER	AISI 304
9	HANDLE	AISI 304
10	LOCKING DEVICE	AISI 304
11	HANDLE COVERING	PLASTIC
12	LOCK WASHER	AISI 304
13	HANDLE NUT	AISI 304

Béné Inox – 11 chemin de la Pierre Blanche – 69800 SAINT-PRIEST – S.A.S with 240 000 € share capital – SIREN N° 311 810 287
Tel. N°: +33 (0)4 78 90 48 22 – Fax N°: +33 (0)4 78 90 69 59 – www.bene-inox.com – bene@bene-inox.com

Technical information, illustrations and photographs are provided for information only, they are not contractual. Some may vary according to the tolerances accepted in the profession and the applicable standards. All instructions for use, disassembly and maintenance are recommendations only. These could also vary depending on product usage conditions, its installation environment and purchaser requirements – of which the purchaser alone is responsible for their definition.

Use

This valve is a shut-off valve: it must be either fully open or fully closed.

Do not leave the valve partially open: an opening default, or leaving the ball valve partially open to decrease flow, could lead to cavitation which is likely to damage the valve.

You must lift the locking device **10** to be able to turn the valve's handle **9**. You must always turn the handle by a complete 1/4 turn, until it cannot be turned any further.


Turn the valve's handle 1/4 turn (90°) clockwise to close the valve or 1/4 turn (90°) anti-clockwise to open it.

The valve is open if the handle is in line with the piping.

You can lock the handle with a padlock, in the open or closed position.

Pressure and temperature

For pressure/temperature ratings, see the graph below.

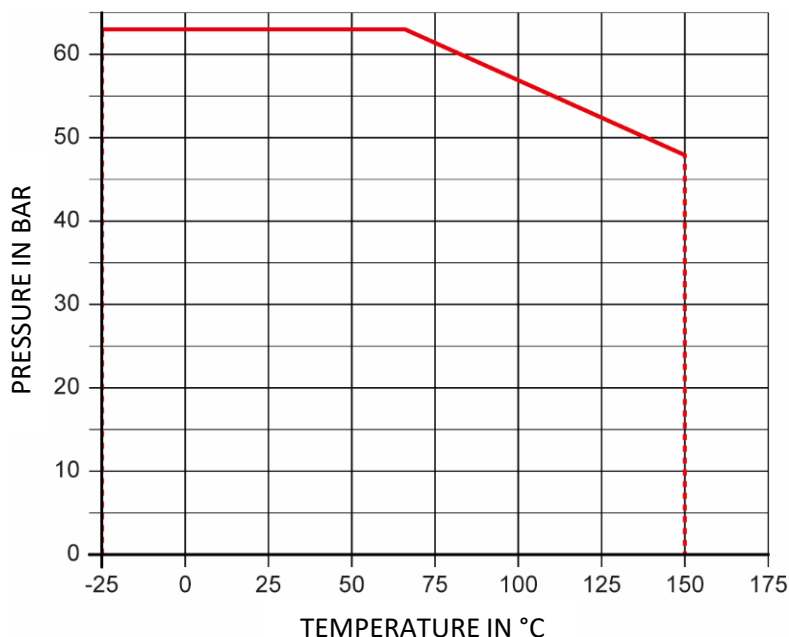

Warning: If the valve is used with fluids that have a temperature above 60°C then people could burn themselves if they touch it.

This valve is suitable for non-abrasive and non-coagulable fluids, as long as the fluids are chemically compatible with the valve parts that they can come into contact with.



Warning: Beware of hazardous materials - follow the instructions provided by the suppliers.

Flow coefficient and pressure loss

Dimensions	DN8	DN10	DN15	DN20	DN25	DN32	DN40	DN50
	1/4"	3/8"	1/2"	3/4"	1"	1 1/4"	1 1/2"	2"
Kv (m³/h)	2.2	4.4	7.6	14.6	20.2	35.9	56.0	91.8

The flow coefficient Kv defines water flow rate through a device (valve, check valve etc.) for a pressure loss (ΔP) of 1 bar. Kv is expressed mathematically as:

$$\Delta P = \frac{Q^2}{K_v^2} \quad \text{so:} \quad K_v = \frac{Q}{\sqrt{\Delta P}} \quad \begin{array}{l} Q \text{ in m}^3/\text{h} \\ \Delta P \text{ in bar} \end{array} \quad \begin{array}{l} K_v \text{ in m}^3/\text{h} \\ C_v \text{ in GPM (Gallons} \\ \text{per minute - US)} \end{array} \quad C_v = 1.16 \times K_v$$

Assembly and maintenance instructions

Installation

You can install the valve in any position. However, check that there is enough space to move the valve's handle where you are planning to install the valve.

Check that the installation is clean and free from foreign bodies that could damage the valve.

Check that all piping is perfectly aligned and that the piping support structure is dimensioned so that the valve is not subject to any external stresses. The piping support structure must only support the pipes, not the valve.

How to install a valve with threaded ends:

Use a wrench that is suitable for the hexagon-shaped valve ends. You must not use the valve's handle when you are tightening the assembly (this could damage the valve).

Use a product that is suitable for the working conditions (e.g. PTFE tape) to make sure the valve's threaded connections are sealed correctly, but do not over tighten the connections as this could deform the valve's body.

Clean the installation leaving the valve open so that there are no foreign bodies between the ball and the body. Check the valve is operating correctly.

Pressure test the installation according to the relevant standards (e.g. EN 12266-1), but do not exceed the valve's specifications.

Maintenance

The maintenance and removal/installation of the valve must be carried out by personnel who are qualified and trained for this type of intervention.



Warning: Before you work on the valve, check that the installation has been stopped and that the piping is empty and is not pressurised.

Warning: If the valve is used with fluids that have a temperature above 60°C then people could burn themselves if they touch it.

Warning: Beware of hazardous materials - follow the instructions provided by the suppliers.

The valve does not require any specific maintenance if it is used in normal operating conditions.

If the valve is never opened or closed during normal operation then you should regularly open and close the valve to check that it is still working correctly.

If any leaks appear around the shaft **6**, during operation or during the valve installation testing phase, check that the handle nut **13** is sufficiently tightened.

You may need to change some of the valve's parts due to unusual wear and tear, or if a fluid has damaged the valve and caused a leak or malfunction.

If this is the case see the 'Assembly / Disassembly' and 'Spare Parts' sections below.

Assembly / Disassembly

The maintenance and removal/installation of the valve must be carried out by personnel who are qualified and trained for this type of intervention.



Warning: Before you work on the valve, check that the installation has been stopped and that the piping is empty and is not pressurised.

Warning: If the valve is used with fluids that have a temperature above 60°C then people could burn themselves if they touch it.

Warning: Beware of hazardous materials - follow the instructions provided by the suppliers.

Unscrew the clamping ring **5** and remove the seat rings **2** and **4**.

Unscrew the handle nut **13**, remove the lock washer **12**, the handle **9** and the washers **8**.

Push the shaft **6** towards the inside of the valve's body in order to remove it, then remove the flat shaft gasket **7**.

Clean and inspect all of the parts of the valve. Replace any worn parts. You are strongly advised to replace any sealing parts that have been disassembled.

Follow the disassembly steps in reverse to reassemble the ball valve.

Spare parts



Gasket kits

A gasket kit contains:

- 1 front seat ring **2**
- 1 back seat ring **4**
- 3 washers **8**
- 1 flat shaft gasket **7**

(quantity could vary according to the DN)

DN (mm)	NB (inches)	Part number
8	1/4"	D5141-8
10	3/8"	D5141-10
15	1/2"	D5141-15
20	3/4"	D5141-20

DN (mm)	NB (inches)	Part number
25	1"	D5141-25
32	1"1/4	D5141-32
40	1"1/2	D5141-40
50	2"	D5141-50

Handle **9**; **10**; **11**



DN (mm)	NB (inches)	Part number
8	1/4"	D5131-8
10	3/8"	D5131-10
15	1/2"	D5131-15
20	3/4"	D5131-20

DN (mm)	NB (inches)	Part number
25	1"	D5131-25
32	1"1/4	D5131-32
40	1"1/2	D5131-40
50	2"	D5131-50

Standards and compliance

- Connection: BSP female thread in accordance with the standard EN ISO 7-1 (Rp).
- Leak testing according to EN 12266/API 598.
- This valve complies with European Pressure Equipment Directive (PED) 2014/68/EU (formerly 97/23/EC).